

Fig. 10—Front Seat Back Latch

Removal

- (1) Remove snap ring and flat washer from pivot pin.
- (2) Remove end of spring from latch and remove latch assembly.
- (3) Remove spring from groove of pivot pin.
- (4) Remove knob and clip from end of latch.

Installation

- (1) Position spring on pivot pin and align inner end of spring in pivot groove.
- (2) Install latch assembly on pivot pin and insert outer end of spring in notch on latch.

(3) Install flat washer and retainer firmly against latch assembly.

(4) Install clip and knob on latch.

RECLINING SEAT MECHANISM

For ease of assembling, the following procedures should be performed in sequence as listed.

Bucket Type (Fig. 11)**Installation**

- (1) Before pad support and cover are assembled, attach lever release to front recliner.
- (2) Insert upper end of cable into hole in lever. Attach cable and latch to front spring and cover using screw.
- (3) Install spacer on rod end of adjuster. See Figure 11. (**THE SEAT CANNOT BE ASSEMBLED WITHOUT SPACER**).
- (4) Insert adjuster into back of recliner with clevis end on bracket and rod end protruding through the opening in bottom recliner.
- (5) Align holes of clevis in adjuster, with hole in bracket on front recliner. Drive pin spring through bracket and sides of clevis on adjuster.
- (6) Cut clearance hole in side facing of cover so that the release handle shaft is accessible.

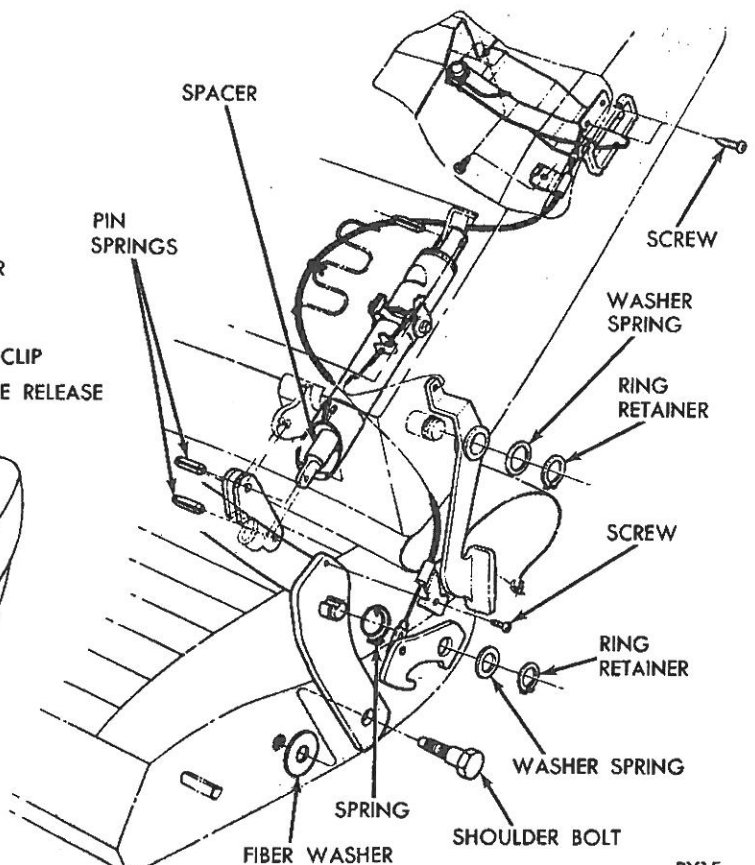
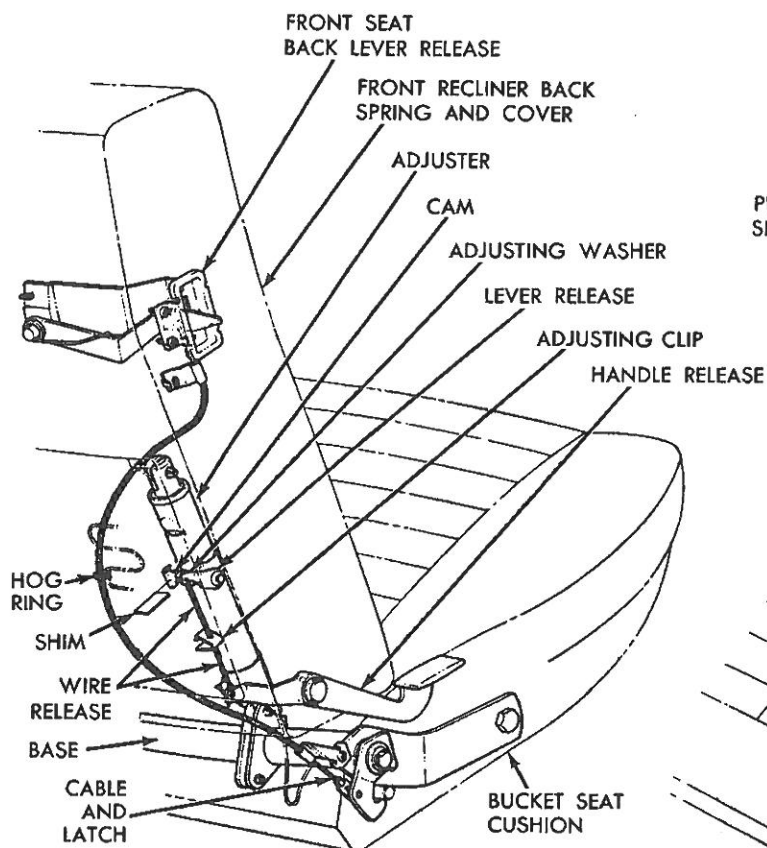


Fig. 11—Reclining Seat Mechanism (Bucket Type)

PY15